




MAIN WINGFORMER 3mm PLYWOOD

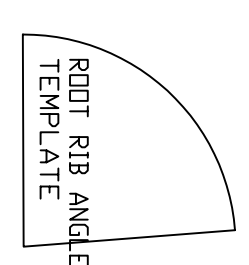






FRONT RIB ANGLE TEMPLATE

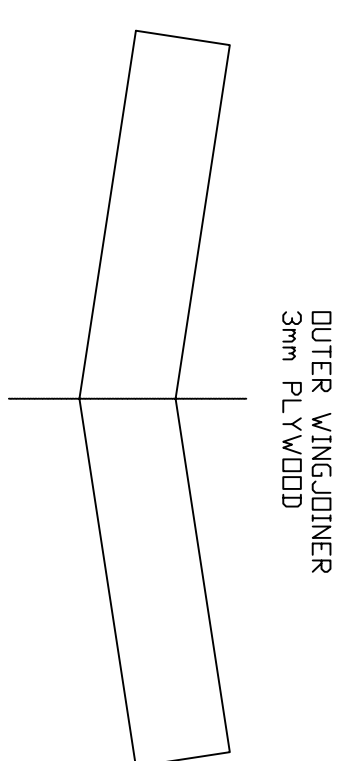


INNER WINGFORMER 3mm PLYWOOD

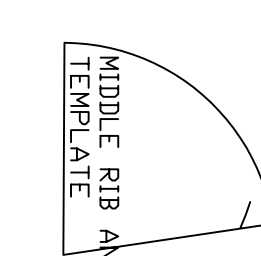

MIDDLE RIB ANGLE TEMPLATE

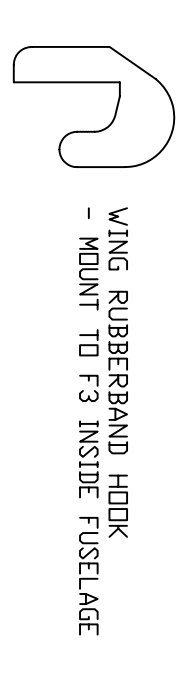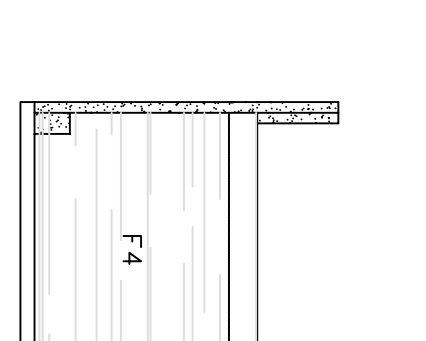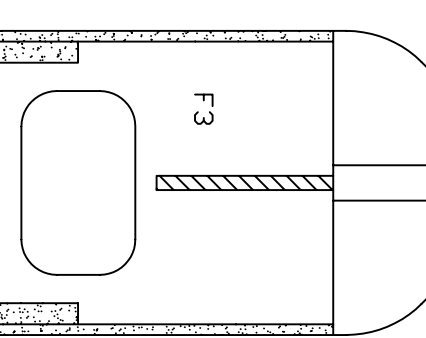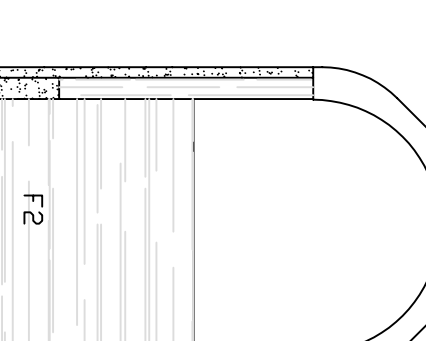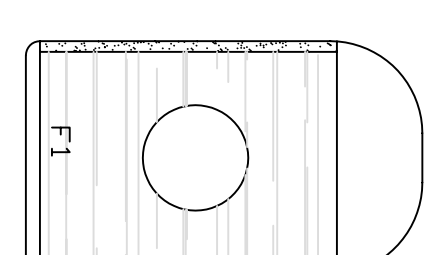

WING ATTACHMENT HOOK - MOUNT TO F3 INSIDE FUSELAGE

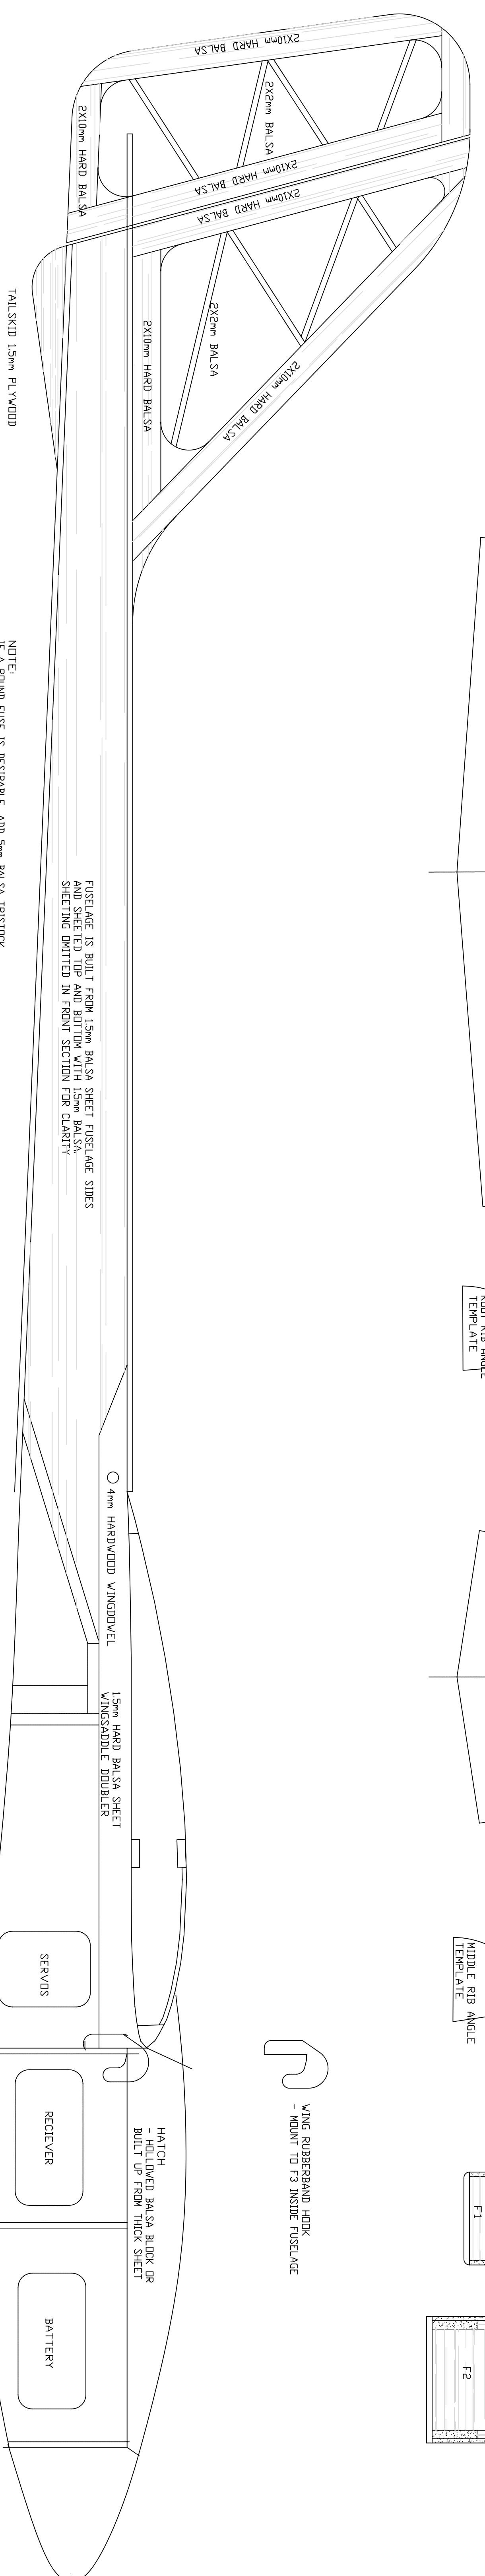

FUSELAGE IS BUILT FROM 15mm Balsa Sheet FUSELAGE STOPS SETTING OUTTED IN FRONT SECTION FOR CLARITY

NOTE: ROUND TIPS IF DESIRABLE AND 5mm Balsa Restraint OR 5mm SQUARE Balsa Strangers TO FUSELAGE CORNERS AND SAND TO ROUNDED SHAPE

MAKE A HOLE IN BOTTOM SHEETING TO FIT YOUR FINGER AND ROOM TO SPARE SEND FOR HANDMAKING THE GLASS

15mm HARD Balsa Sheet WINGSUBSOLE DOUBLER

HATCH HOLLOWED Balsa AROUND BATT AND NEW TIE SHEET

F1 BATTERY
F2 RECEIVER
F3 SERVO

Item#	Quantity	Description, material, amount etc	Issue Number/Date
XXXX	XXXX	XXXX - 80/000	80/000
XXXX	XXXX	XXXX	11/18
XXXX	XXXX	XXXX	11/18
XXXX	XXXX	XXXX	11/18
XXXX	XXXX	XXXX	11/18