


Add long tabs to bottom of ribs. Use these to rest the trailing edge on when gluing up. This helps support and align the trailing edge. When dry and removed from board, trim off tab. Add these to remaining ribs.

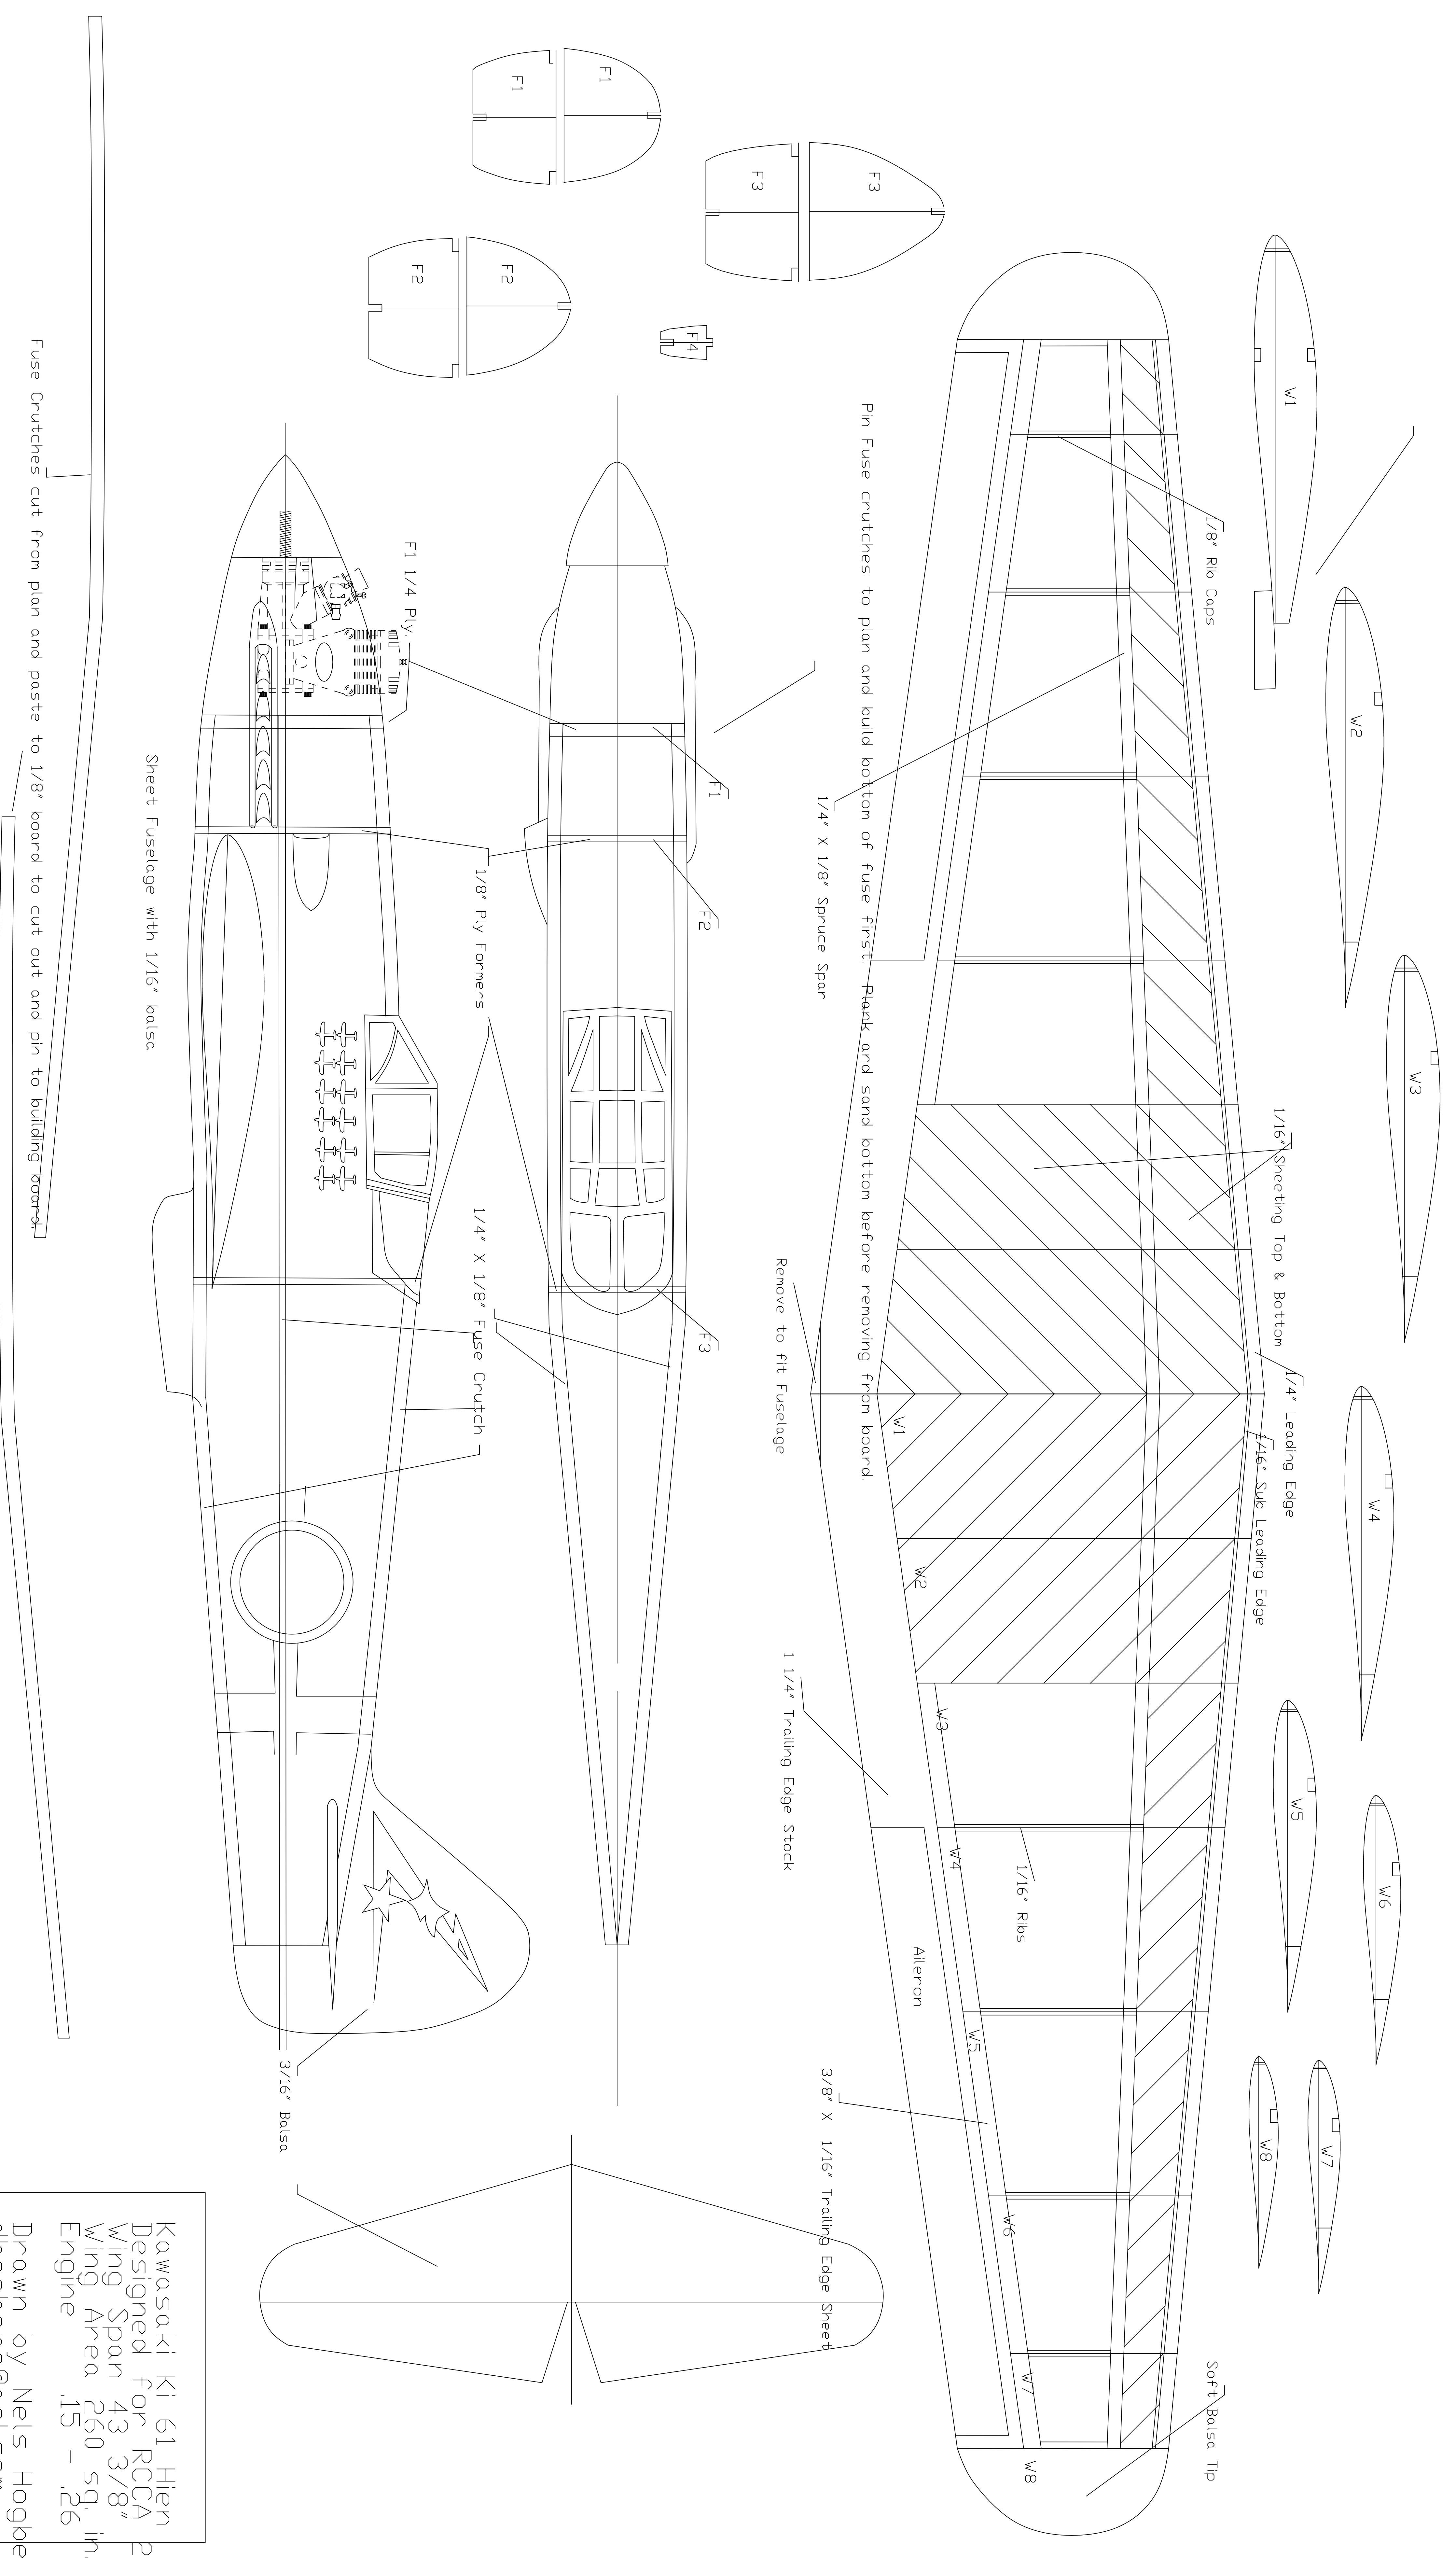

Kawasaki Ki 61 Hien
 Designed for RCCA
 Wing Span 43 3/8"
 Wing Area 260 sq. in. approx.
 Engine .15 - .26
 Drawn by Nels Hogberg
 nhogberg@aol.com

Sheet Fuselage with 1/16" balsa

Fuse Crutches cut from plan and paste to 1/8" board to cut out and pin to building board.

2610 rules